

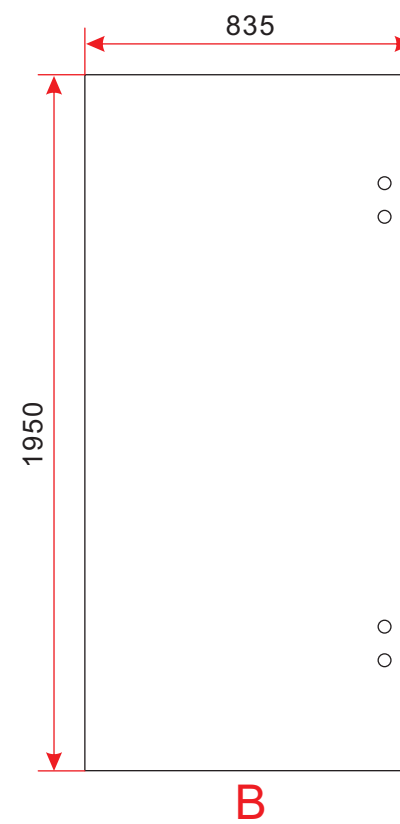
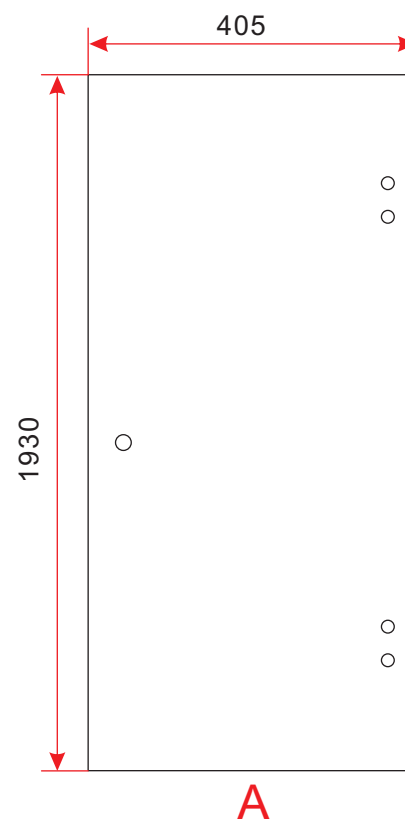



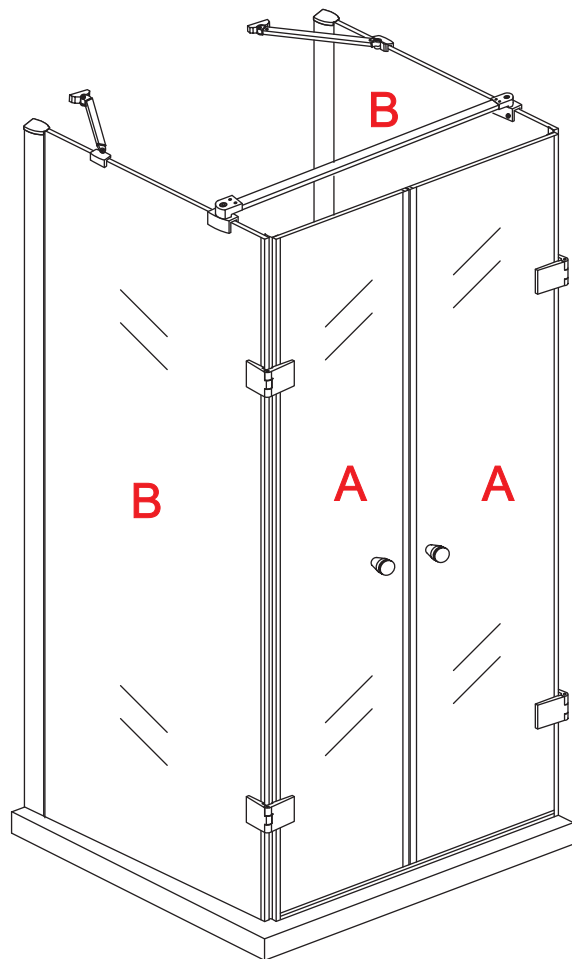


INSTALLATION MANUAL

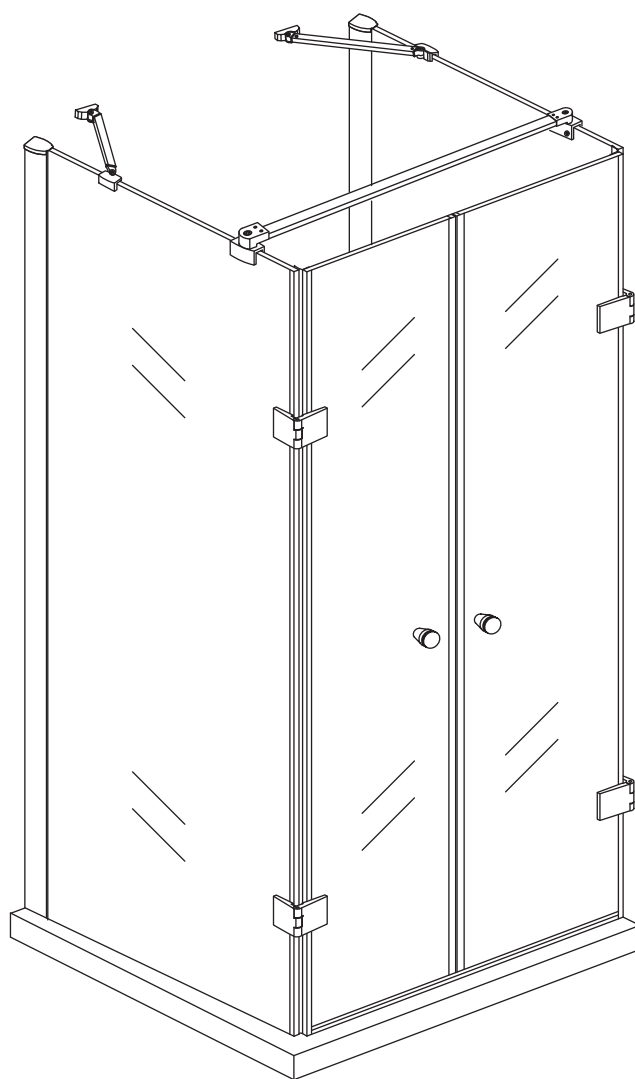


CR-SV9090


RoHS  ISO9001:2015

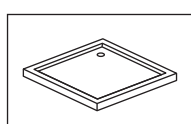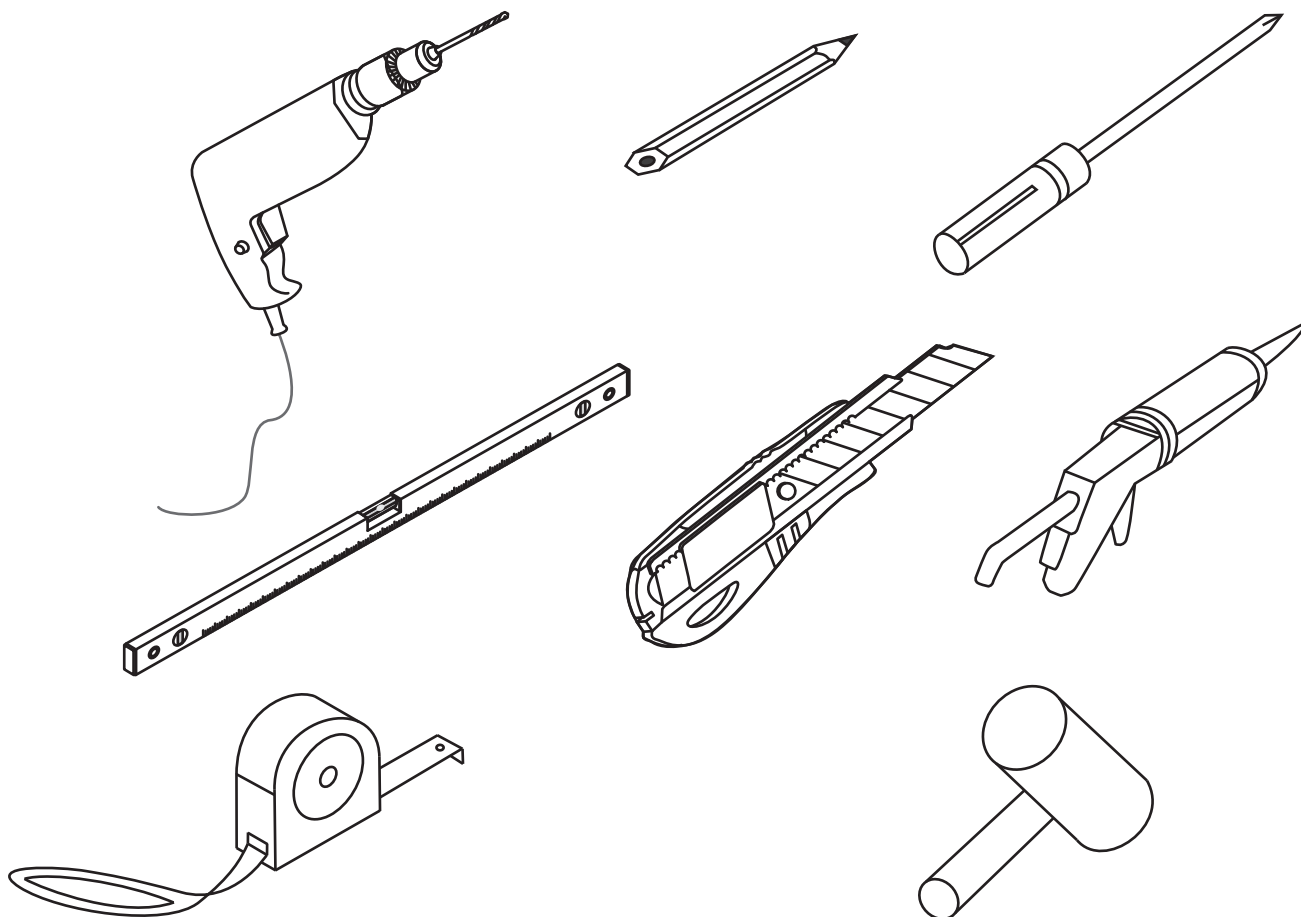


Tray

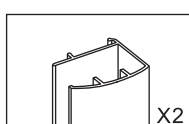


KQ-22

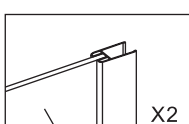


Glass

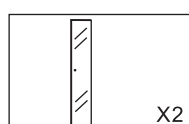


Glass

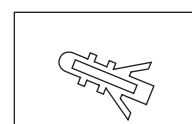


Expand tube

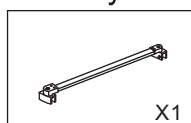


LG-2305

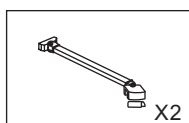


LG-2008

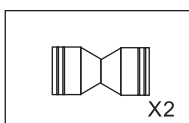


LS-1202

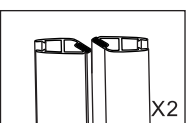


CT-8BMX90

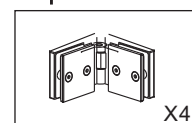

HY-3104

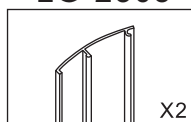

BB-09

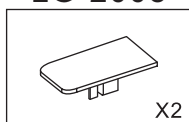


PJ-4677




PJ-4679




PJ-4685

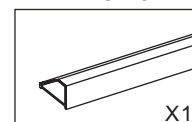

Aluminum
bottom bar

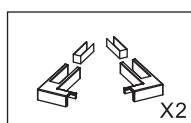


PJ-4789

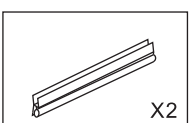

CT-8DSTQ




water-proof
gasket

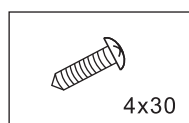

Screw





Screw

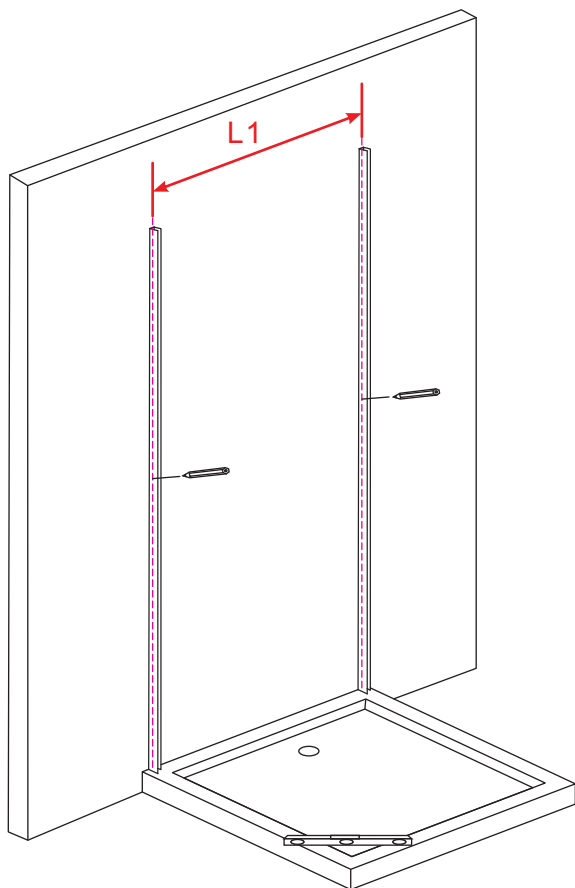

SIZE	L1
900X900	852



1

Install the wall profile: according the line to install the profile notice: put the profile in middle of line.

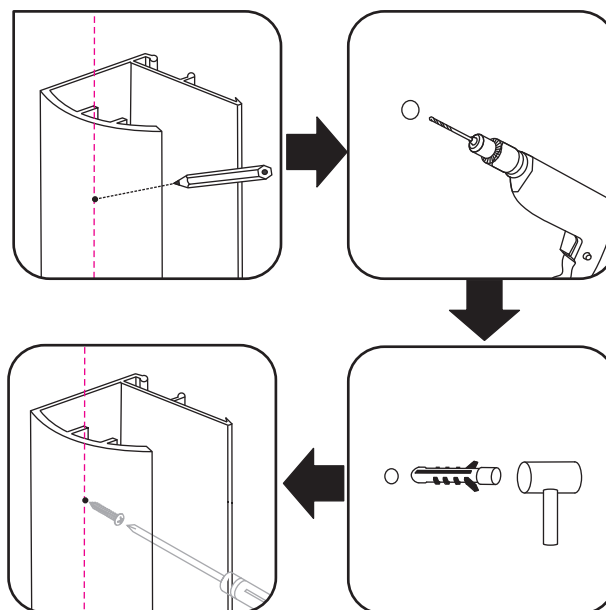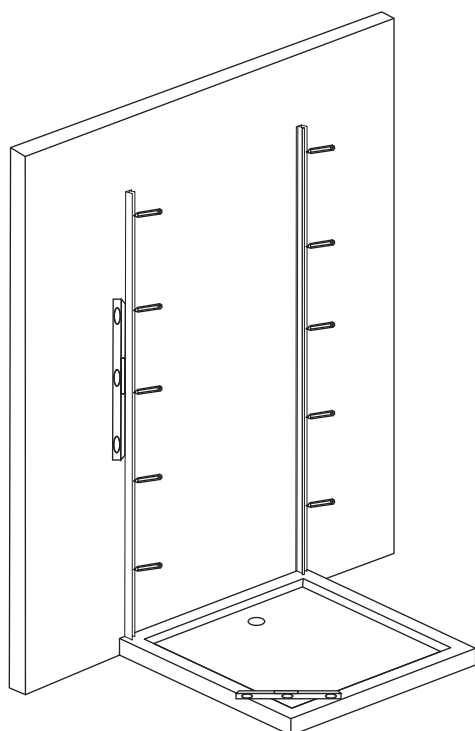

2



Install the fixed glass: insert the fixed glass into wall profile.

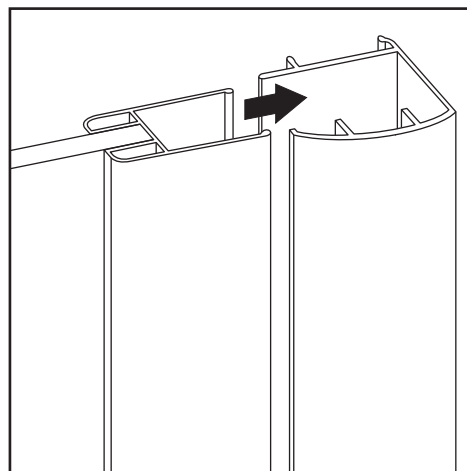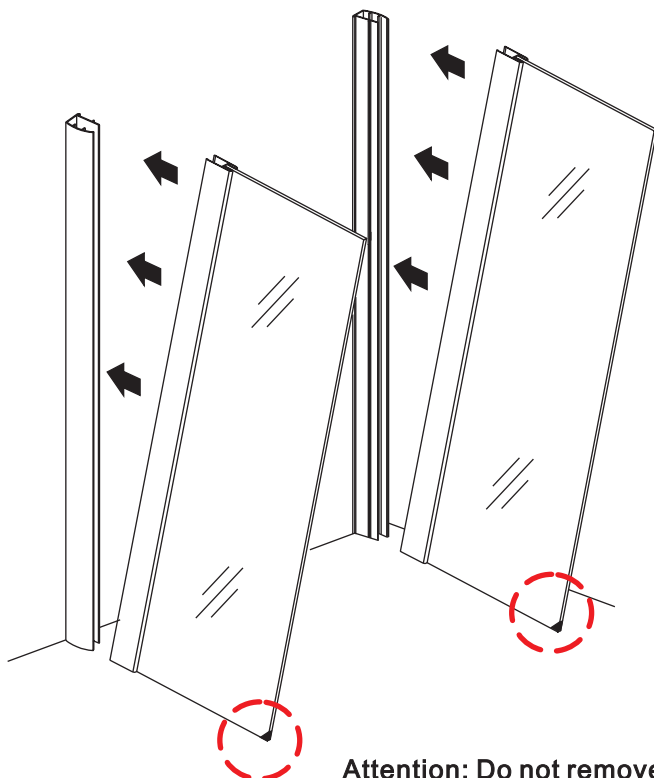







Attention: Do not remove the Black corner protector until insert well the glass into the wall profiles and fit well to prevent glass broken and splitted.






3

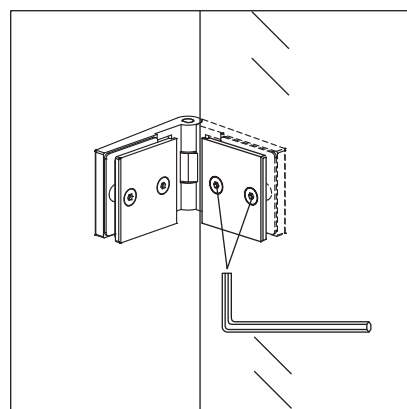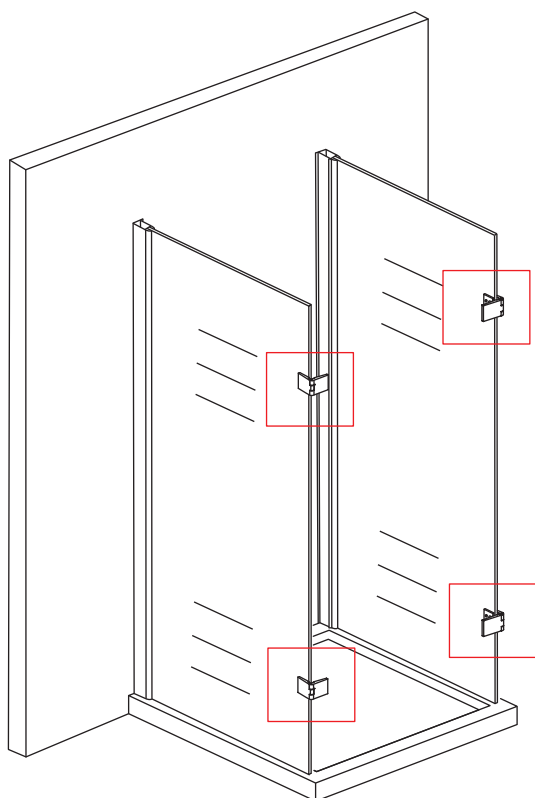




4

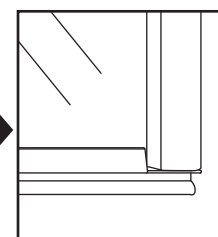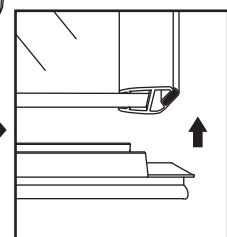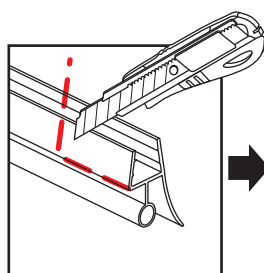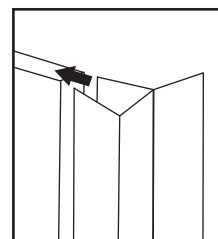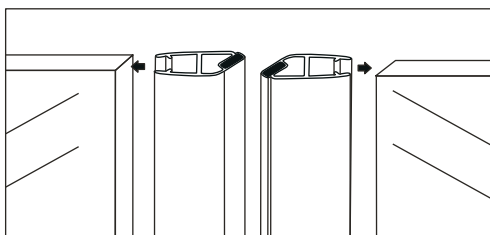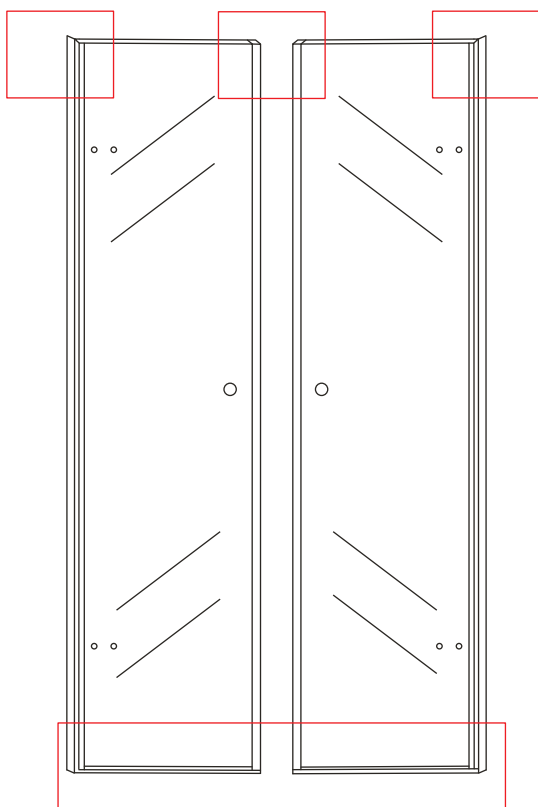




5

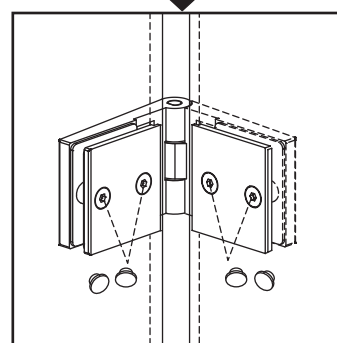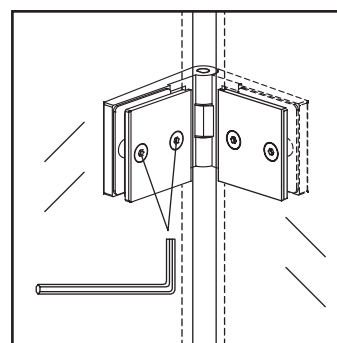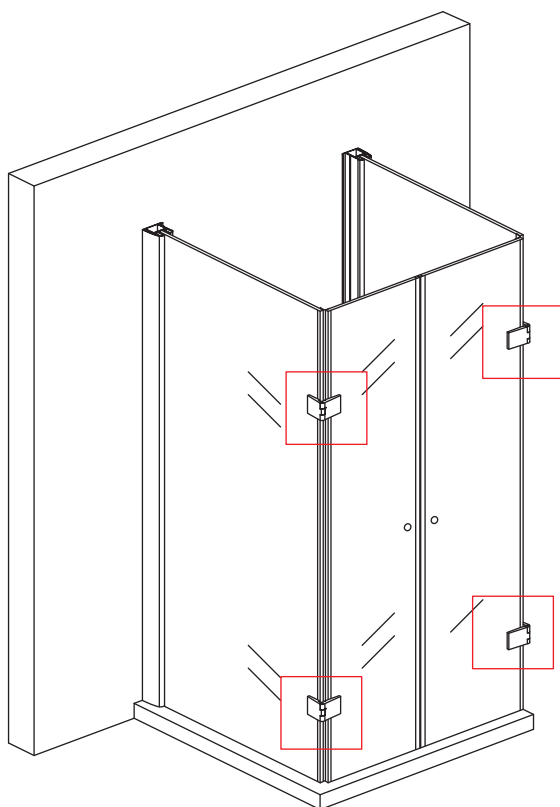








6

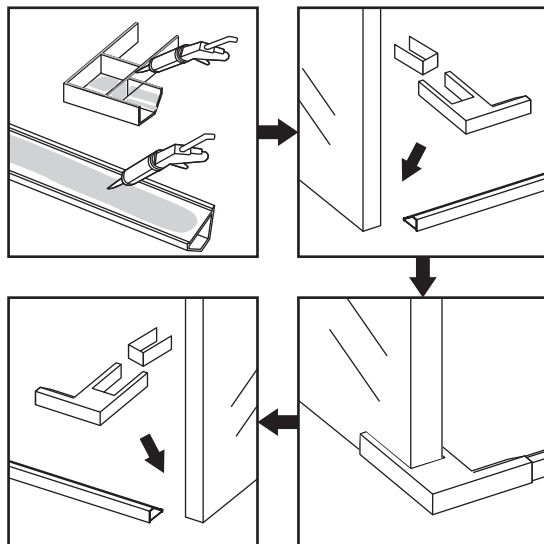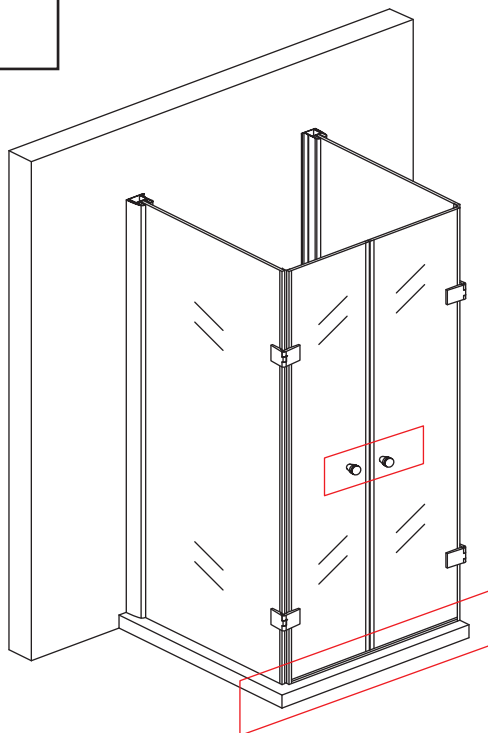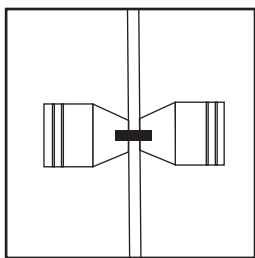


7

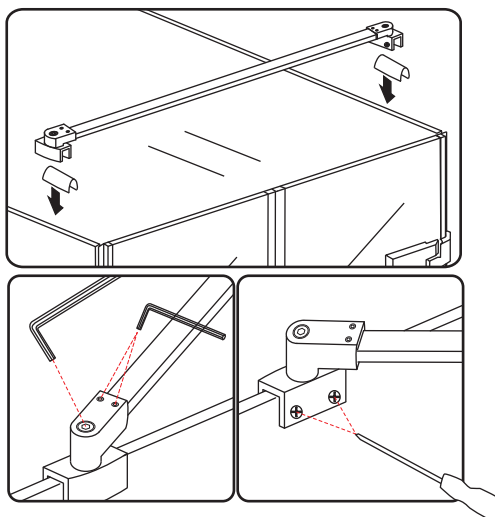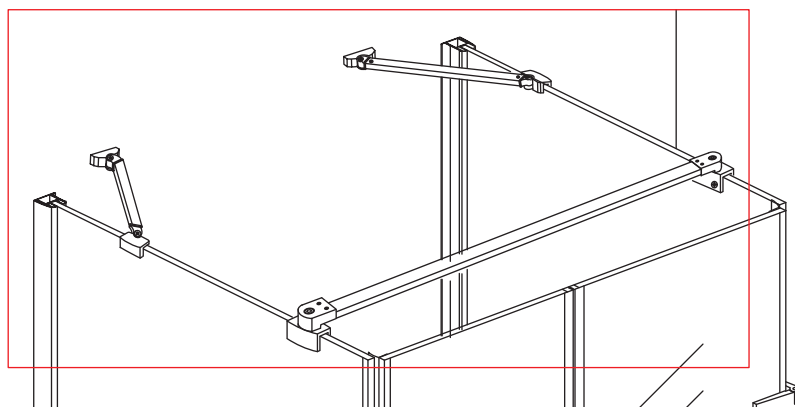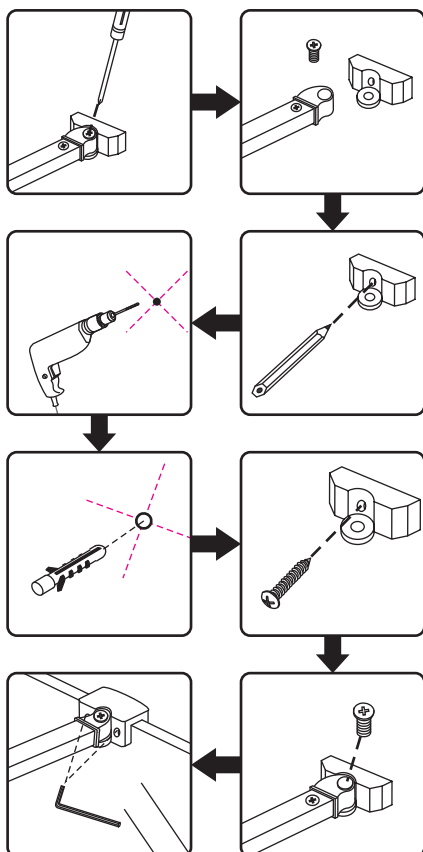

8

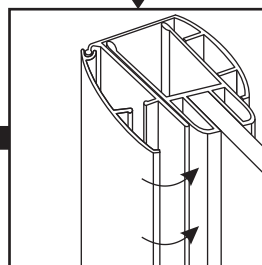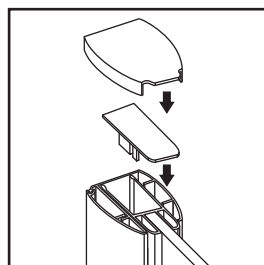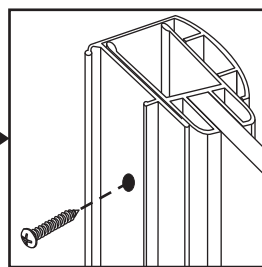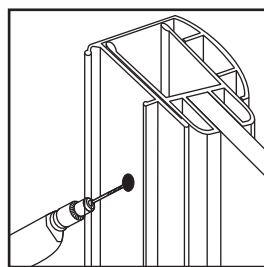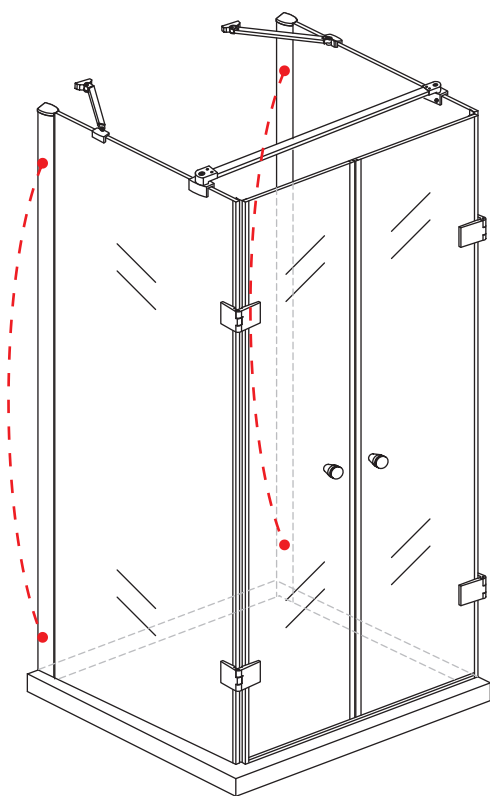

9

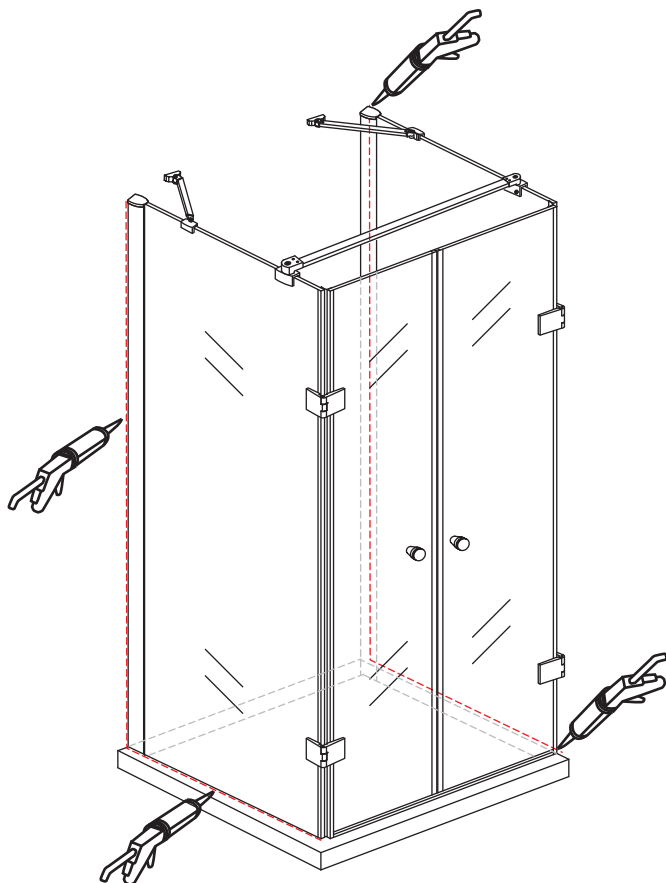

10